# W DMX R
# W DMX M

## USER MANUAL

***Please read carefully the user manual before operations***

### 1. SAFETY INSTRUCTIONS

– CAUTION! Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching the wires!

– This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.

– Important: Damages caused by the disregard of this user manual are not subject to warranty.

– Keep away from heaters and other heating sources!

– If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device.

– Leave the device switched off until it has reached room temperature.

– If the external flexible cable or cord of this luminary is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

– Always disconnect from the mains, when the device is not in user or before cleaning it.

– Keep away children and amateurs from the device!

– There are no serviceable parts inside the device. Maintenance and service operations are only to be carried out by authorized dealers.

### 2. OPERATIONS

- DMX wireless transmitter will send the DMX signal received from the DMX controller to DMX wireless receiver. DMX wireless receiver will relay the signals to fixtures which connect to receiver.
- One wireless transmitter could pair with many receivers.
- To register receiver to transmitter, user simply presses register button on the receiver and transmitter respectively.
- User can observe LED indicator on both transmitter and receiver to understand the machine working status.

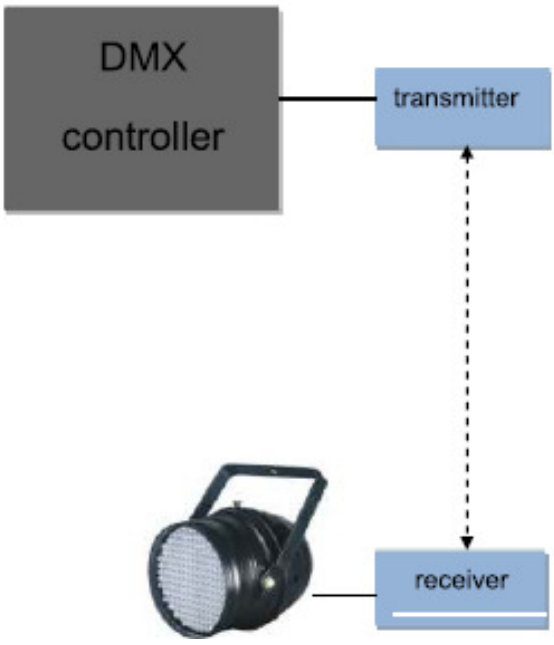

### 3. LED INDICATOR TO CHECK STATUS

| Device | status | LED indicator |
|---|---|---|
| **Transmitter** | Power On ( search clean channel ) | LED fast flash |
| | 1. no dmx controller signal | 1. LED stays ON |
| | 2. receive dmx controller signal | 2. LED slow flash |
| | 3. registering……. | 3. LED fast flash |
| **Receiver** | Power On ( registering 6 seconds) | LED fast flash |
| | 1. No register to any transmitter | 1. LED is OFF |
| | 2. Link with transmitter | 2. LED slow flash |
| | 3. Can not find transmitter | 3. LED stays ON |
| | 4. Registering | 4. LED fast flash |

**Note:**

- If receiver LED is OFF, user needs to register it to transmitter
- If receiver LED is ON all the time, receiver could not find transmitter.
    - Check if transmitter is available
    - Signal between transmitter and receiver are terribly interference. Under this case, user simply power off and on transmitter again. Transmitter automatically select new clean channel and receiver will also automatically link to transmitter.
- User might press registering key on receiver and find receiver LED stays ON.
    - It is due to the registration process that is very fast and transmitter is still in registering mode and do not send out DMX signal. Please wait for a moment. You will soon see receiver starts to flash after transmitter exit register mode.
- For multiple transmitters'application, please power on transmitter at a time. After the transmitter select clean channel (exit of LED fast flash), continue to power on second transmitter.

### 4. TECHNICAL SPECIFICATIONS

Dimension : 110 x 111 x 40 mm

Weight: 0.360kg

# W DMX R
# W DMX M

## USER MANUAL

***Please read carefully the user manual before operations***

### 1. SAFETY INSTRUCTIONS

– CAUTION! Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching the wires!

– This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.

– Important: Damages caused by the disregard of this user manual are not subject to warranty.

– Keep away from heaters and other heating sources!

– If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device.

– Leave the device switched off until it has reached room temperature.

– If the external flexible cable or cord of this luminary is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

– Always disconnect from the mains, when the device is not in user or before cleaning it.

– Keep away children and amateurs from the device!

– There are no serviceable parts inside the device. Maintenance and service operations are only to be carried out by authorized dealers.

### 2. OPERATIONS

- DMX wireless transmitter will send the DMX signal received from the DMX controller to DMX wireless receiver. DMX wireless receiver will relay the signals to fixtures which connect to receiver.
- One wireless transmitter could pair with many receivers.
- To register receiver to transmitter, user simply presses register button on the receiver and transmitter respectively.
- User can observe LED indicator on both transmitter and receiver to understand the machine working status.

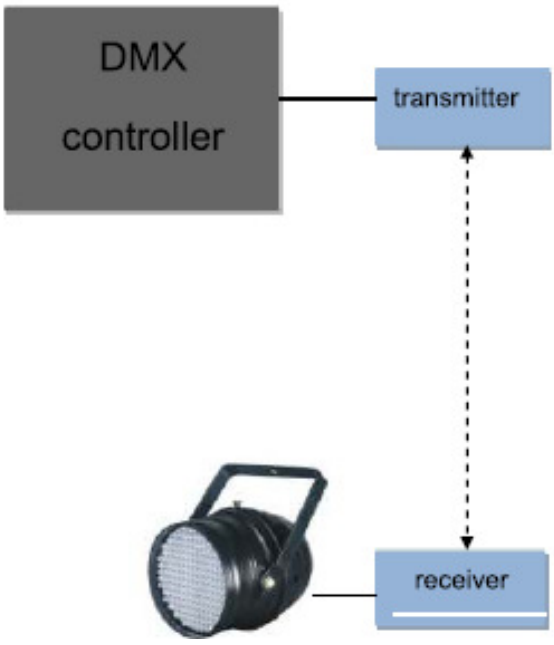

### 3. LED INDICATOR TO CHECK STATUS

| Device | status | LED indicator |
|---|---|---|
| **Transmitter** | Power On ( search clean channel ) | LED fast flash |
| | 1. no dmx controller signal | 1. LED stays ON |
| | 2. receive dmx controller signal | 2. LED slow flash |
| | 3. registering……. | 3. LED fast flash |
| **Receiver** | Power On ( registering 6 seconds) | LED fast flash |
| | 1. No register to any transmitter | 1. LED is OFF |
| | 2. Link with transmitter | 2. LED slow flash |
| | 3. Can not find transmitter | 3. LED stays ON |
| | 4. Registering | 4. LED fast flash |

**Note:**

- If receiver LED is OFF, user needs to register it to transmitter
- If receiver LED is ON all the time, receiver could not find transmitter.
    - Check if transmitter is available
    - Signal between transmitter and receiver are terribly interference. Under this case, user simply power off and on transmitter again. Transmitter automatically select new clean channel and receiver will also automatically link to transmitter.
- User might press registering key on receiver and find receiver LED stays ON.
    - It is due to the registration process that is very fast and transmitter is still in registering mode and do not send out DMX signal. Please wait for a moment. You will soon see receiver starts to flash after transmitter exit register mode.
- For multiple transmitters'application, please power on transmitter at a time. After the transmitter select clean channel (exit of LED fast flash), continue to power on second transmitter.

### 4. TECHNICAL SPECIFICATIONS

Dimension : 110 x 111 x 40 mm

Weight: 0.360kg